








## SPARE PARTS : ACCESSORIES (B)

<p><b>K02039</b> <b>Strap</b> - Loop Strap for Wheel Chock 600 circumference</p>		<p>Cat 7</p>
<p><b>01-02-000-35</b> <b>Platform Mount</b> <b>Bearing</b> <b>Block and Bearing</b></p>		<p>Cat 1</p>
<p><b>01-02-000-31</b> <b>Platform Rear Mount &amp;</b> <b>Bearing</b></p>		

<p><b>K04707 – K04710</b>  <b>Batter Spray All Sizes -</b>  <b>Aluminium</b></p>		
<p><b>01-002-007-16-GAL</b>  <b>Access Handrail</b>  <b>Galvanised</b></p>		<p>Cat 1</p>
<p><b>01-02-410</b>  <b>01-02-410 O/S</b>  <b>Work Area Door Post</b>  <b>(Specify left hand or</b>  <b>right hand)</b></p>		<p>Cat 1</p>
<p><b>01-02-412</b>  <b>Rear Door Post</b></p>		<p>Cat 1          Cat 7</p>

<p><b>Lagging</b> <b>Sizes:</b> <b>K01773</b> FS-F-10 <b>K01774</b> FS-F-12 <b>K01775</b> FS-F-14 <b>K01776</b> FS-F-16 <b>K01777</b> FS-F-38</p>		
<p><b>K02598</b> <b>Fire Blanket Holder -</b> <b>canvas</b></p>		<p>Cat 1</p>
<p><b>K03515</b> <b>Beacon Mounting</b> <b>Bracket</b> <b>Isuzu FTS 800</b></p>		<p>Cat 1</p>
<p><b>01-02-262</b> <b>Beacon Mounting</b> <b>Bracket</b> <b>Isuzu FTS 750</b></p>		

<p><b>01-02-262H</b> <b>Beacon Mounting</b> <b>Bracket</b> <b>Hino</b></p>		
<p><b>07-03-105</b> <b>Beacon Mounting</b> <b>Bracket</b> <b>Mitsubishi Canter</b></p>		<p>Cat 7</p>
<p><b>01-04-257</b> <b>Control box - includes</b> <b>locks &amp; hinges (NO</b> <b>ELECTRICS)</b></p>		<p>Cat 1</p>

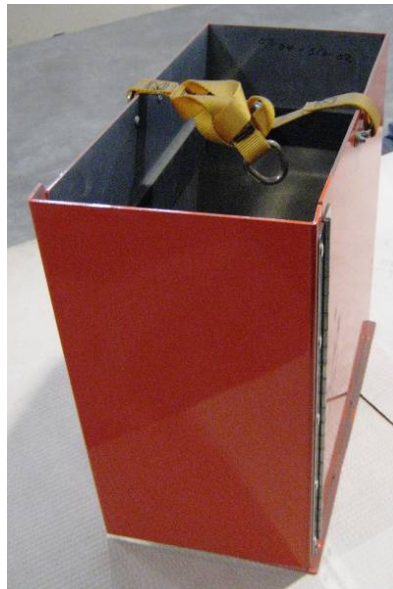
**01-02-235**  
**Control box Mounting**  
**Plate**




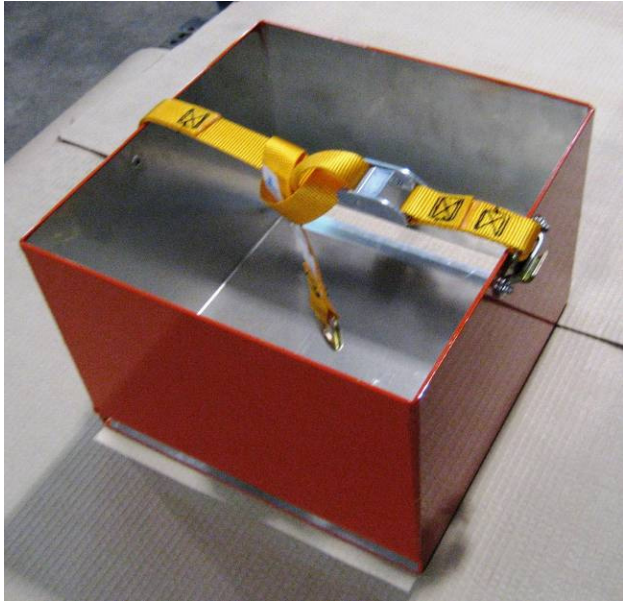
Cat 1

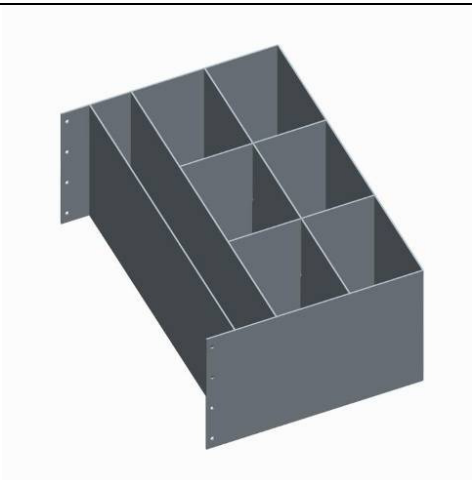
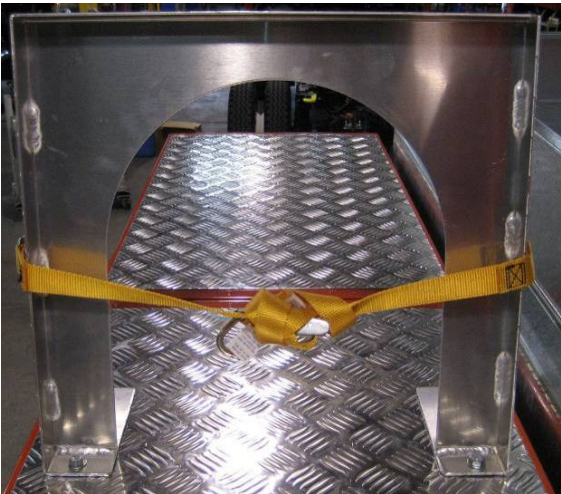
**07-04-000-28**  
**Jerry Can Holders**

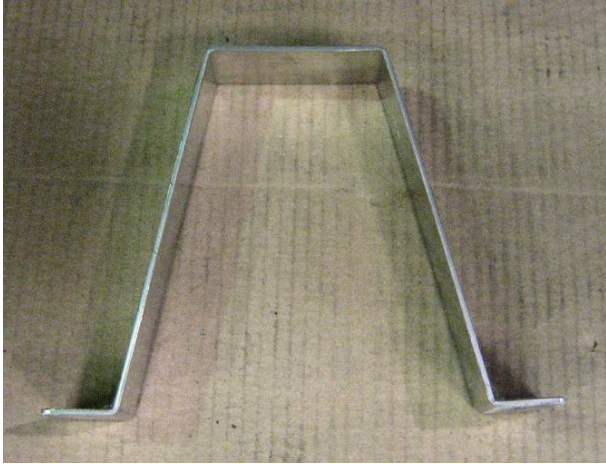

- Jerry Can Holder  
20L



<p><b>K04649</b> <b>Jerry Can Holder</b></p> <ul style="list-style-type: none"><li>• Jerry Can Holder Double 10L</li></ul>		
<p><b>01-02-000-24</b> <b>Jerry Can Holders</b></p> <ul style="list-style-type: none"><li>• Jerry Can Holder Double 20L</li></ul>		<p>Cat 1</p>
<p><b>K03517</b> <b>Portable Pump Box</b> (with grease nipple hole)</p>		<p>Cat 1</p>

<p><b>K03517 GENSET</b> <b>Portable Pump &amp; Genset Box (without hole)</b></p>		<p>Cat 1</p>
<p><b>09-03-000-11</b> <b>Foam Bin</b></p>		<p>Cat 7 Cat 9</p>
<p><b>07-02-000-11</b> <b>Foam Bin Mounted Under Platform</b></p>		

<p><b>K04037</b> <b>Map &amp; portable radio holder for 400mm wide control box – RAW</b></p>		
<p><b>Spanner for Y Strainer</b></p> <ul style="list-style-type: none"><li>• <b>01-02-161-62AF</b> 75MM (62 AF HEX)</li><li>• <b>01-02-161-69AF</b> 75MM (69 AF HEX)</li><li>• <b>07-03-161</b> 65MM</li></ul>		<p>Cat 1 Cat 7 Cat 9</p>
<p><b>K03537</b> <b>Traffic Cone Bracket - includes strap</b></p>		<p>Cat 1 Crew Cab</p>

<p><b>R1000171</b>  <b>Traffic Cone Bracket</b>  <b>KO2481</b>  <b>Strap – 650 x 150</b></p>		<p>Cat 1  Single  Cab</p>
<p><b>K03548_BA_SPARE</b>  <b>BA spare cylinder</b>  <b>storage bracket with</b>  <b>retaining strap</b></p>		
<p><b>Ring Main Crew</b>  <b>Protection Spray</b></p> <p><b>Mounting Brackets</b></p> <p><b>KO4561 – Isuzu Crew</b>  <b>Cab</b>  <b>KO4560 – Isuzu Single</b>  <b>Cab</b>  <b>KO4562 – Hino Crew</b>  <b>Cab</b></p>		
<p><b>07-04-000-65</b>  <b>Spray Conversion Kit</b></p> <ul style="list-style-type: none"> <li>• Crew Cab Spray Cable</li> <li>• Cabin Bracket + Spacer</li> <li>• Bulkhead Bracket</li> <li>• Label</li> </ul>		<p>Cat 7  Single  Cab</p>

<p><b>Spray Conversion Kit</b></p> <ul style="list-style-type: none"> <li>• Crew Cab Spray Cable</li> <li>• Cabin Bracket + Spacer</li> <li>• Bulkhead Bracket</li> <li>• Label</li> </ul>		<p>Cat 7 Single Cab</p>
<p><b>K04188</b></p> <p><b>Front Spray Kit</b></p> <ul style="list-style-type: none"> <li>• 1 x Cabin cable mounting bracket - front spray type with labels</li> <li>• 2 x Front spray operating cables with clevis</li> <li>• 1 x double bulk head bracket galvanised</li> <li>• 2 x Gal mal Elbow</li> <li>• 2 x 1" ball valve to suit cable operation</li> <li>• 2 x hose tail brass 3/4" tail x 25bspm</li> <li>• 1 x heat guard</li> <li>• FRAS hose as per BOM</li> <li>• Tails + hose clamps</li> <li>• Large p-clips for hose</li> <li>• Nozzles + copper washers</li> <li>• Elbows</li> <li>• Assembly Drawing</li> </ul>		<p>Cat 1 1998-1999</p>
<p><b>K04189</b></p> <p><b>Front Spray Conversion Kit</b></p>		<p>Cat 1 Pre-1995</p>

Email: spares@kuipers.com.au

Tel: +61 2 4587 8599

Fax: +61 2 4587 8550

<ul style="list-style-type: none"> <li>• Convert solenoid sprays to cable operated</li> <li>• 1 x Cabin cable mounting bracket - front spray type with labels</li> <li>• 2 x Front spray operating cables with clevis</li> <li>• 1 x double bulk head bracket galvanised</li> <li>• 2 x Gal mal Elbow</li> <li>• 2 x 1" ball valve to suit cable operation</li> <li>• 2 x hose tail brass 3/4" tail x 25bspm</li> <li>• Assembly drawing</li> </ul>		
<p><b>K01428</b>  <b>12V Interrupter Fuel Pump – No Filter</b></p>		
<p><b>12V Interrupter Fuel Pump – With Filter</b></p>		